

## Land Rover Range Rover 3.6 TDV8 2008

1. Find plug for rail pressure sensor. Disconnect it and connect box adapter between.

