

Mitsubishi L200 2.5DI-D 136KM 2007

1. Find plug for rail pressure sensor. Disconnect it and connect box adapter between.

