

Skoda Superb 2.5TDI 163HP 2007

1. Find plug for fuel pump. Disconnect it and connect box adapter between.

