

Toyota Auris 1.4D-4D 90HP 2006

1. Find plug for rail pressure sensor. Disconnect it and connect box adapter between.

