

## Toyota Corolla 2.0D4D 116HP 2005

1. Find plug for rail pressure sensor. Disconnect it and connect box adapter between.

