

Toyota RAV4 2.2D-4D 136HP 2006

1. Find plug for rail pressure sensor. Disconnect it and connect box adapter between.

