

Toyota Hilux 2.5D4D 102HP 2006

1. Find plug for rail pressure sensor. Disconnect it and connect box adapter between.

