


Skoda Octavia 1.9 TDI 105HP

1. Box type: VT101301.
2. Find plug for injector harness. Disconnect it and connect box adapter between.

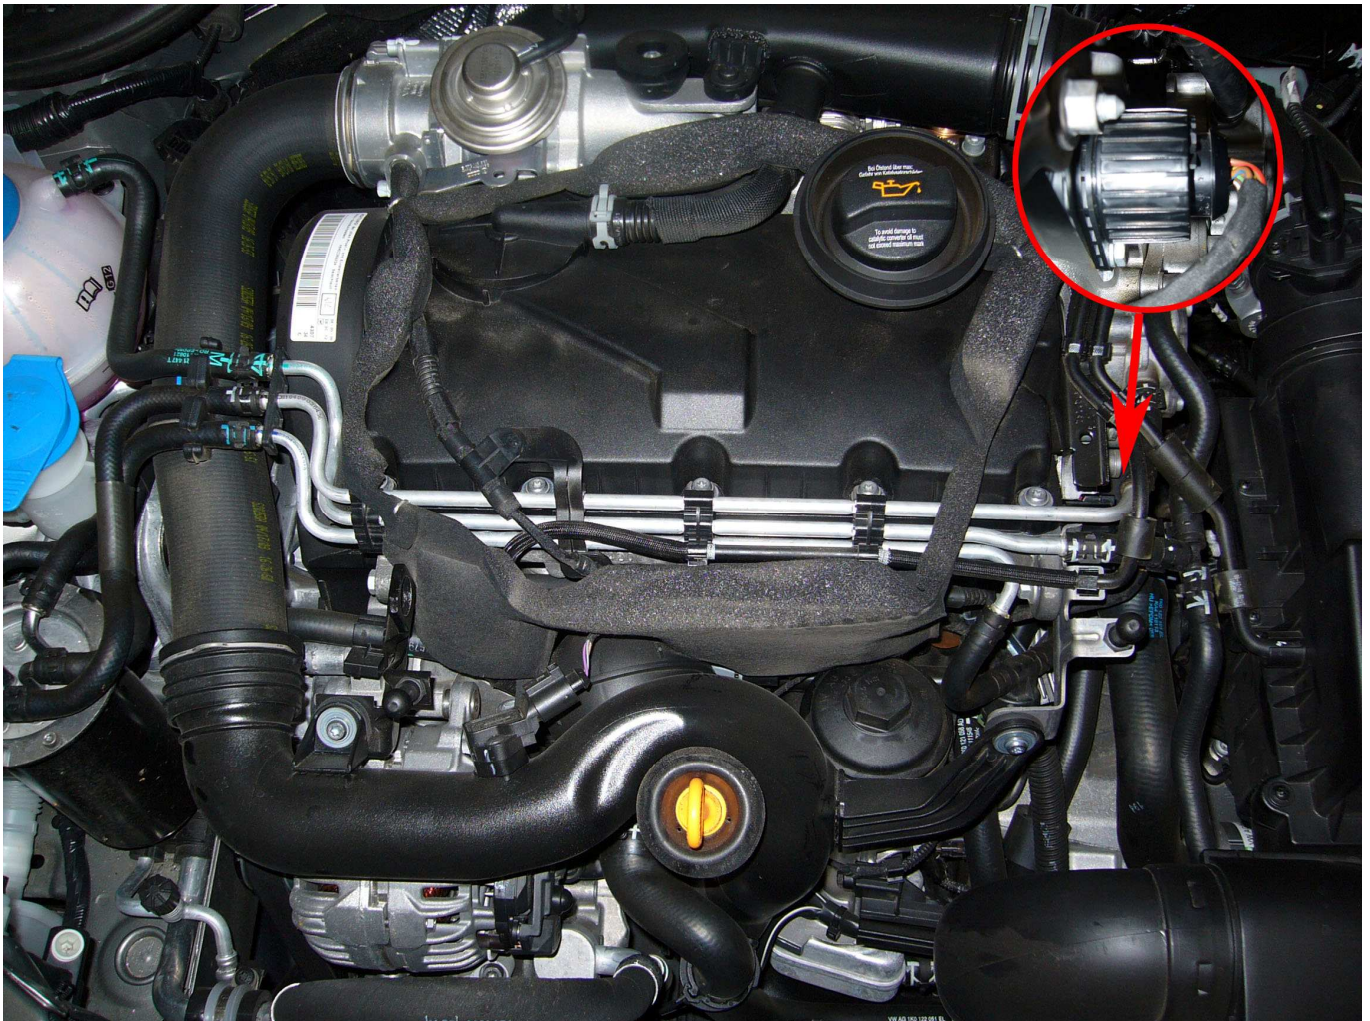

3. Connect black (-) and red (+) wires to battery.