


VW Passat 2.0 TDI 140PS

1. Box type: VT101301.
2. Find plug for injector harness. Disconnect it and connect box adapter between.

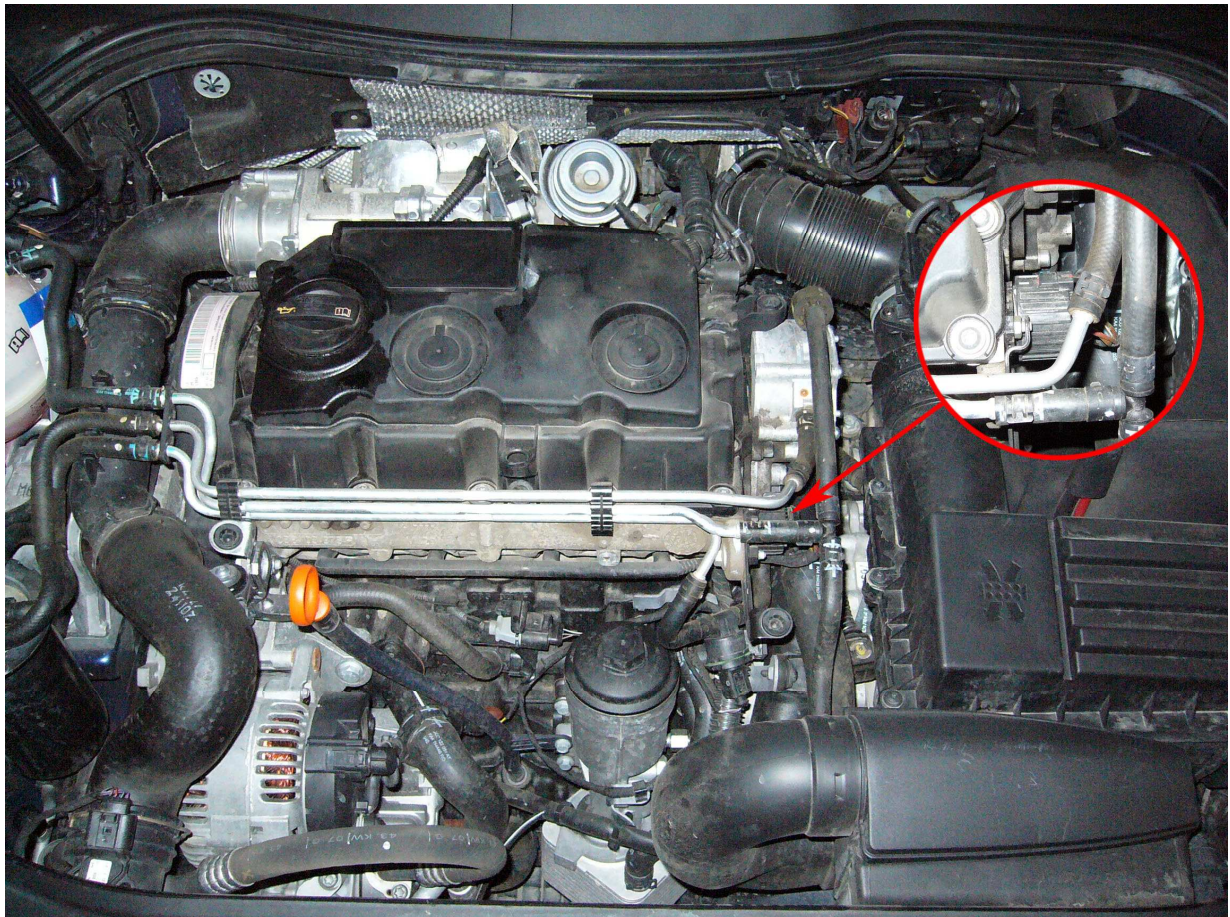

3. Connect black (-) and red (+) wires to battery.

