


VW Golf 2.0TDI 136HP 2005

1. Find plug for injector harness. Disconnect it and connect box adapter between.

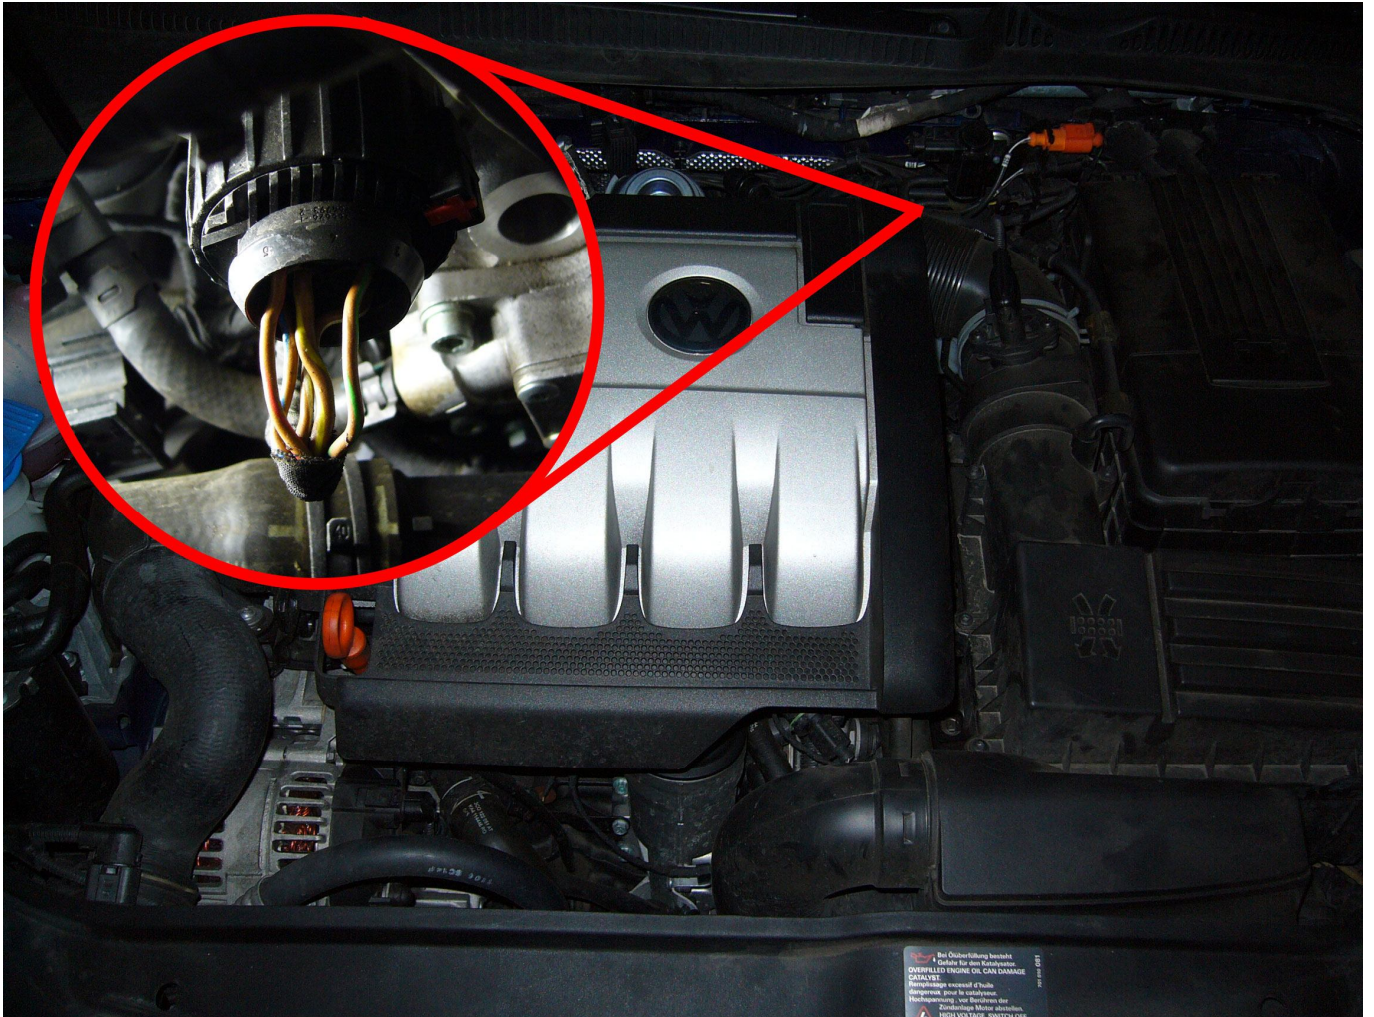

2. Connect black and red wires to battery.