


## Ford Focus 1.8TDDi 90HP

1. Box type: VT101101.
2. Find plug for fuel pump. Disconnect it and connect box adapter between.

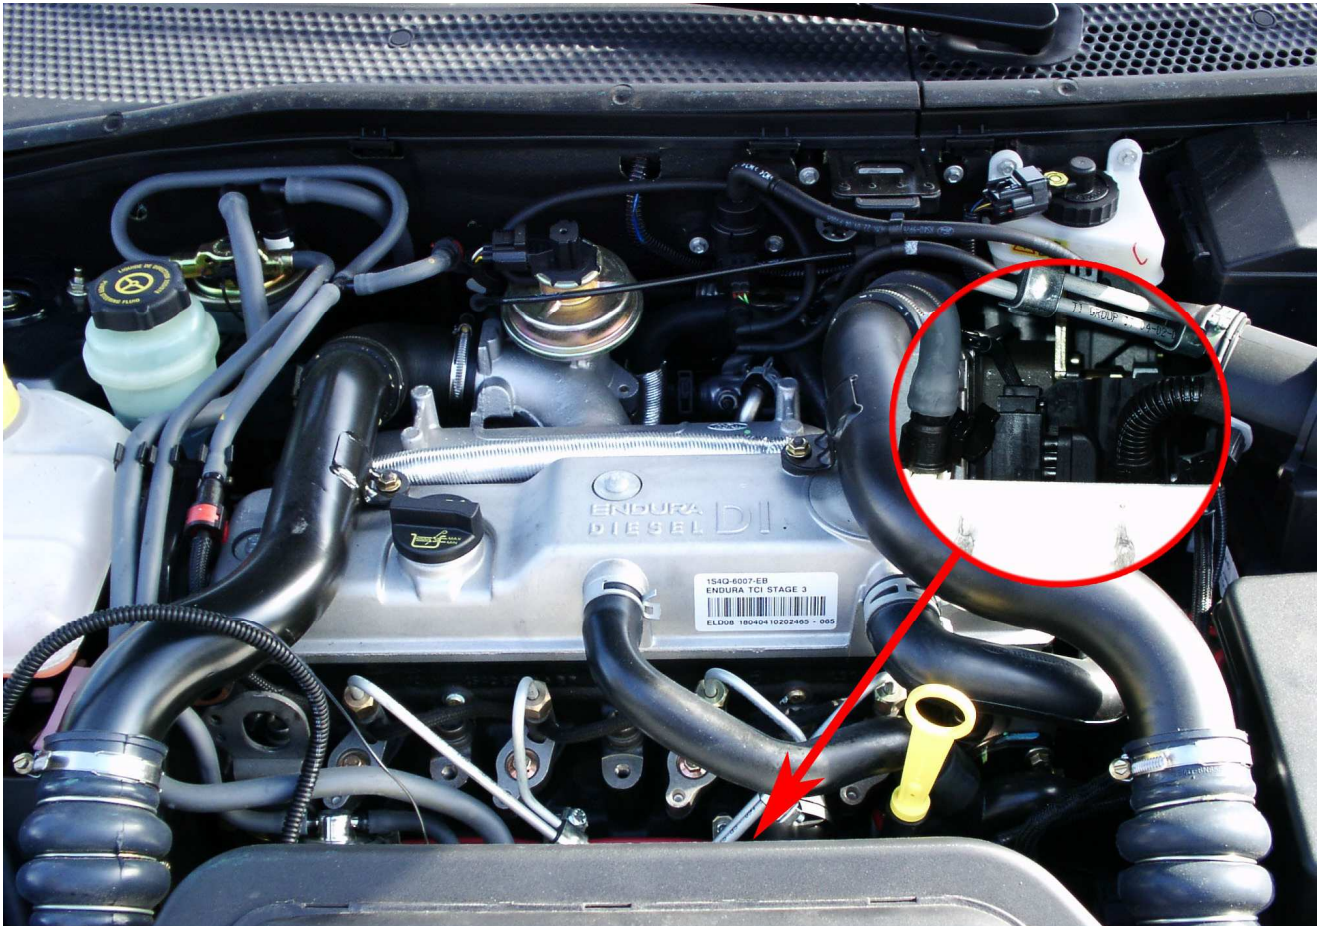

3. Set jumpers in proper position.



\*In some automatic gearbox are possible problems with proper work (especially VAG 2.5TDI). In this cases are needed software modification for gearbox.