


## Mitsubishi Outlander 2.0DI-D 140HP

1. Box type: VT101302.
2. Find plug for injector harness. Disconnect it and connect box adapter between.

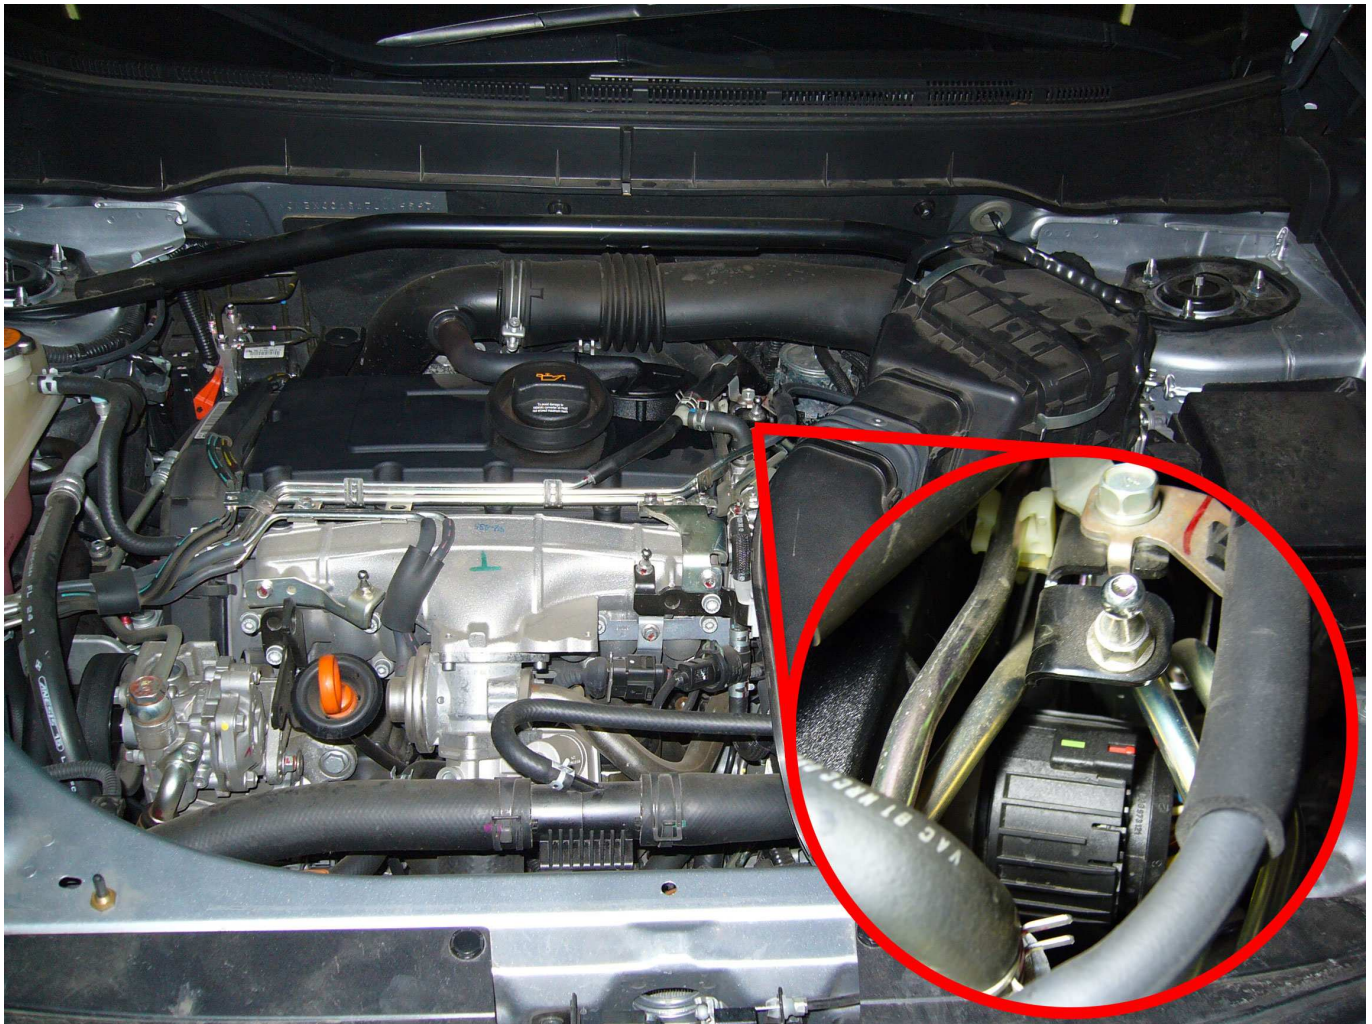

3. Connect black ( - ) and red ( + ) wires to battery.